




< Figure 15 > Routing the new lines for the PSM control unit connector.

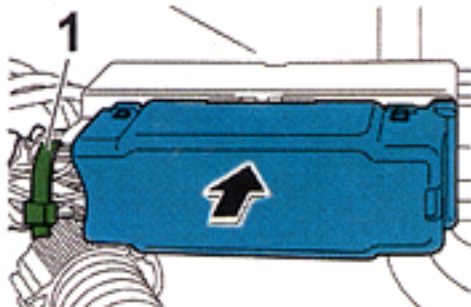


< Figure 16 > Mounting the cap on the PSM control unit connector.

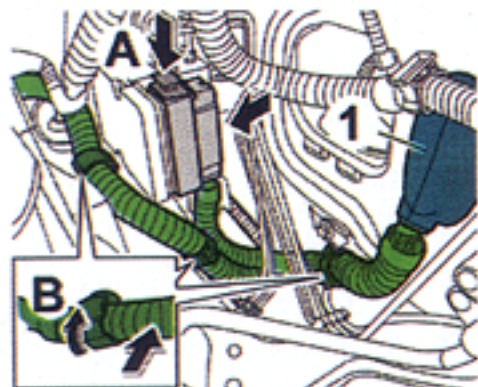


< Figure 17 > Mounting the PSM control unit connector.

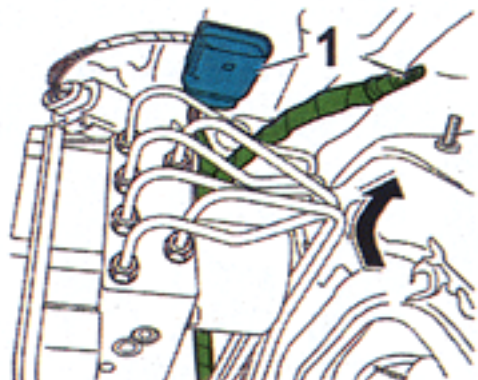

< Figure 18 > Routing the wire harness under the hydraulic unit.

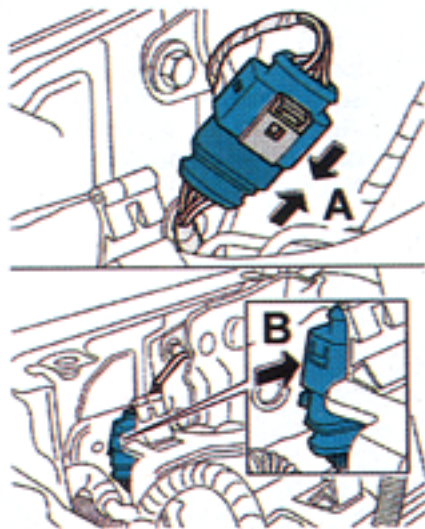

< Figure 19 > Pushing together the hood wire harness plug connection.

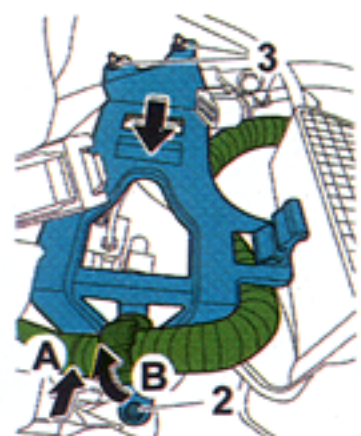

< Figure 20 > Installing support for the DME control module.